




HMF EXPRESS

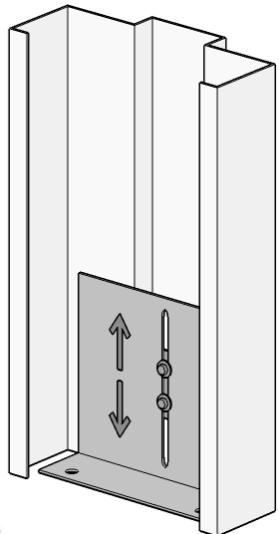


AB - adjustable base

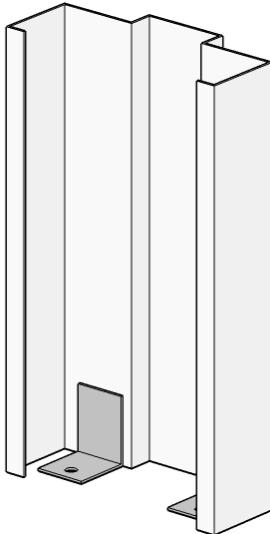


BA - base anchor

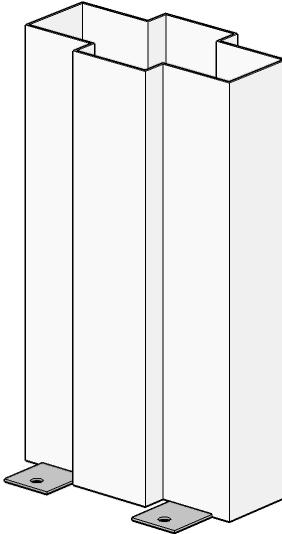


IB - inverted base

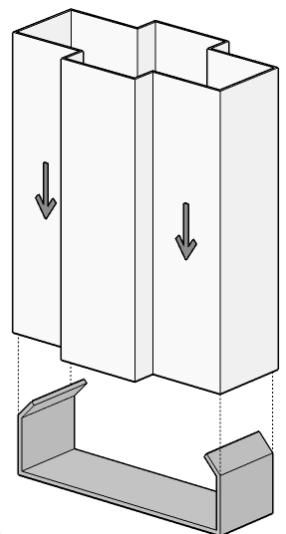


MB - mullion base

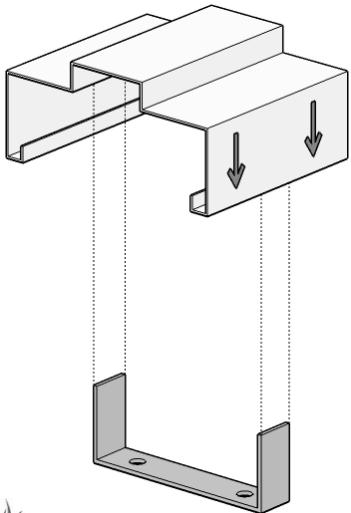


SL - sill anchor

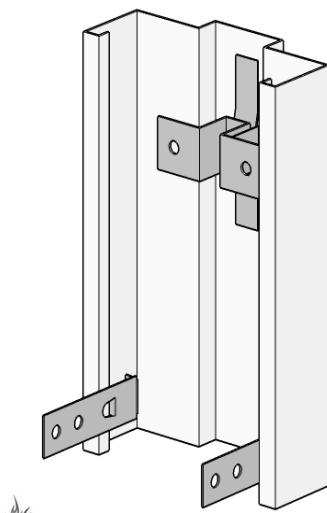


CO - compression w/ base clips

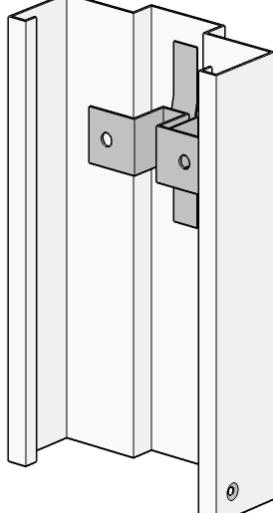


CP - compression w/ P&D base

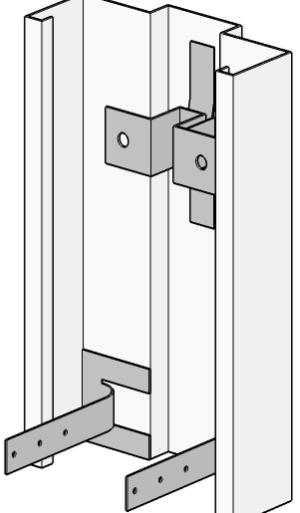


CW - compression w/ wood stud

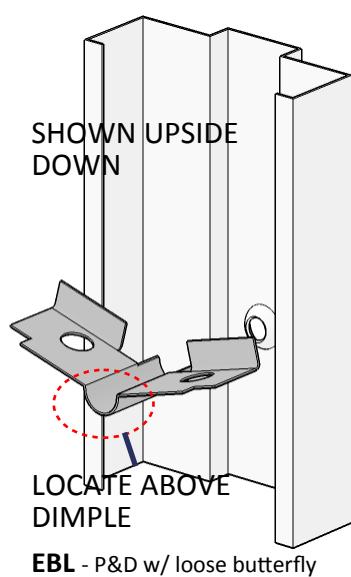


EBL - P&D w/ loose butterfly

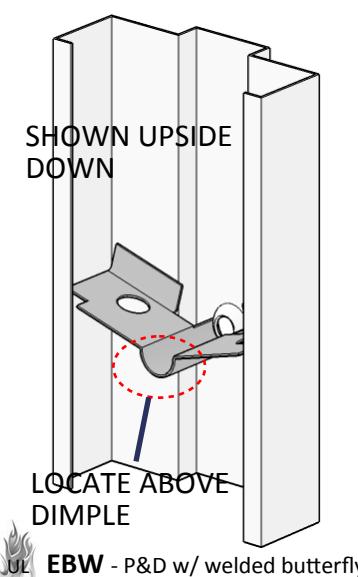

EBW - P&D w/ welded butterfly

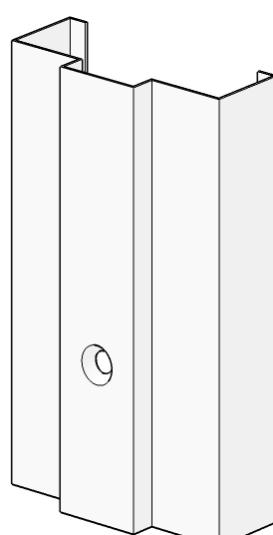


ED - punch & dimply only

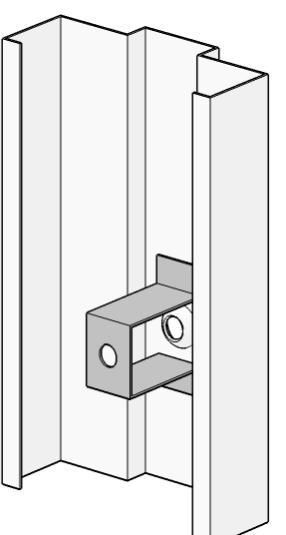


EX - top hat EMA (standard)


HMF EXPRESS

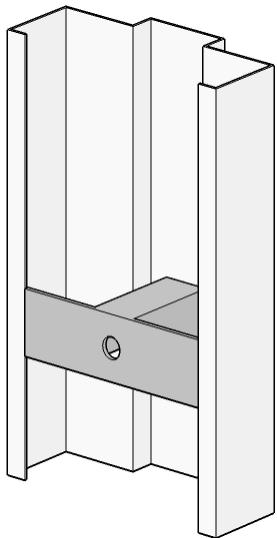


EP - P&D w/ welded pipe sleeve

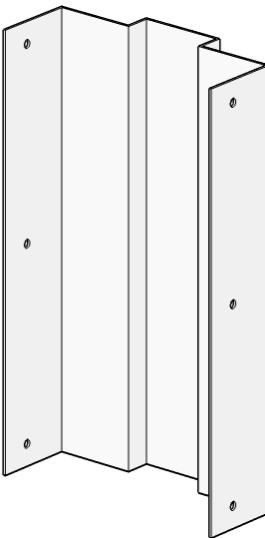


PF - holes only, no countersink

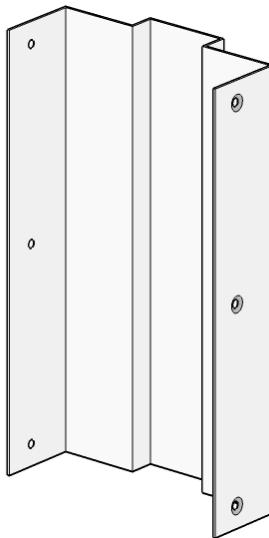


PFC - holes only, w/ countersink

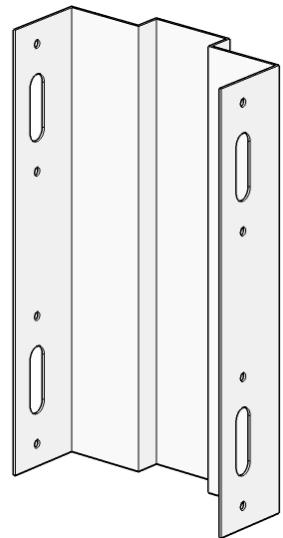


PS - holes & slots, no countersink

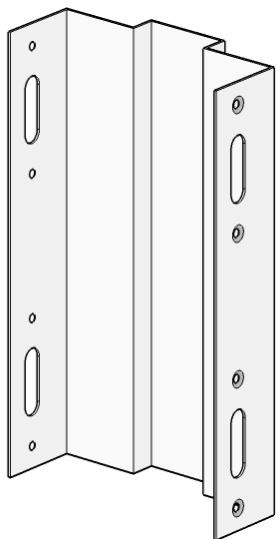


PSC - holes & slots, w/ countersink

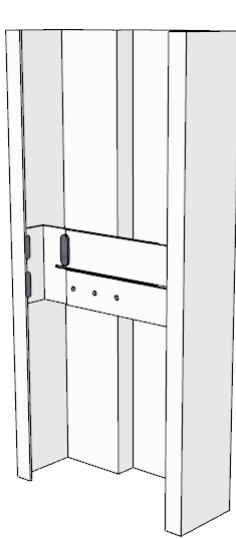


LRC - lead lined combo strap

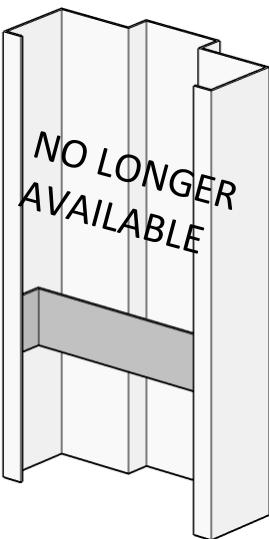


LRS - lead lined steel stud strap

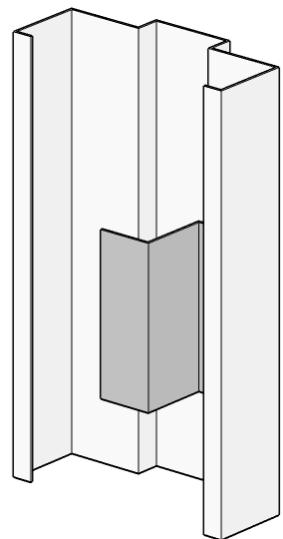


LVS - lead lined vertical steel stud

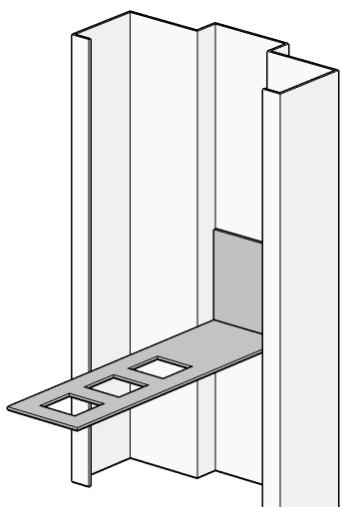


FS - fixed strap

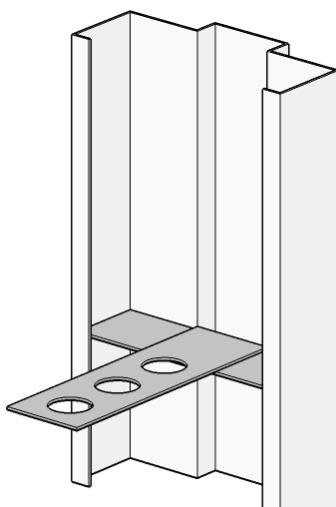

TA - masonry tee






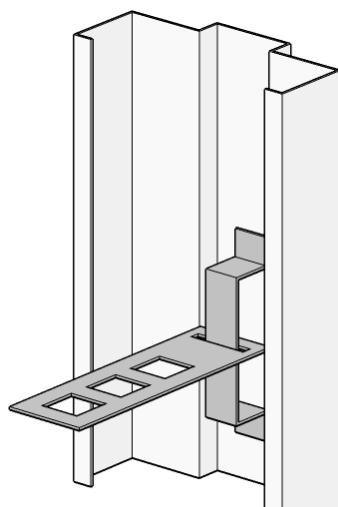


SA - adjustable strap

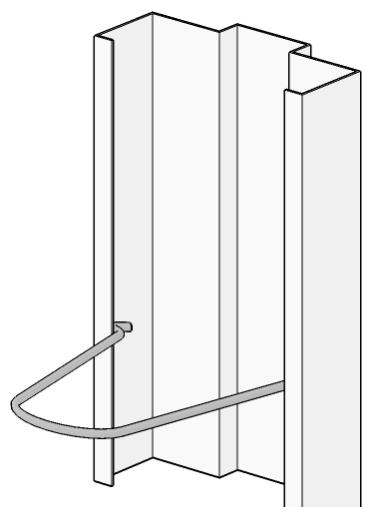

WA - wire masonry

HMF EXPRESS

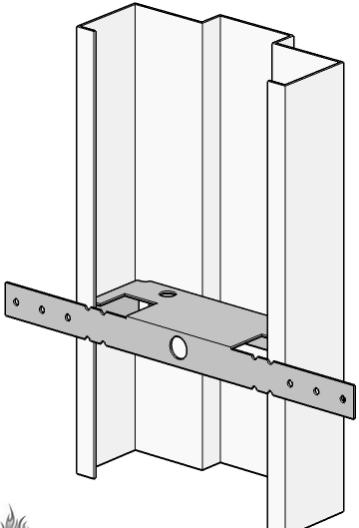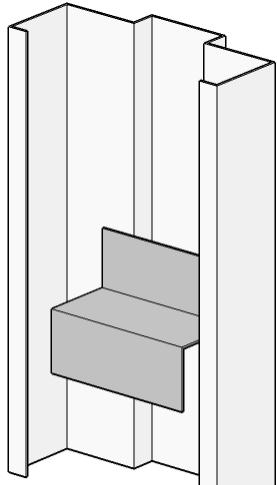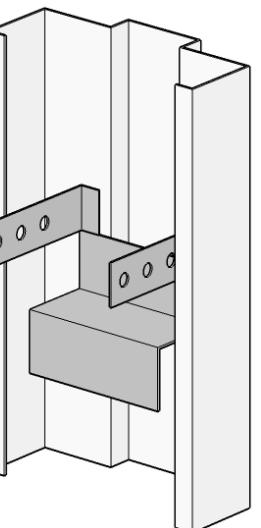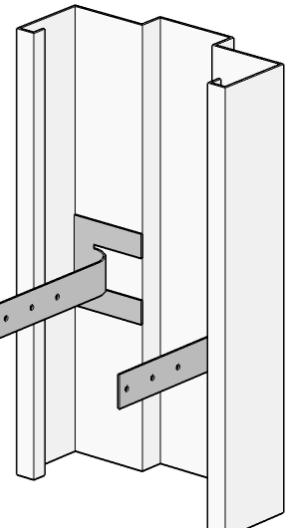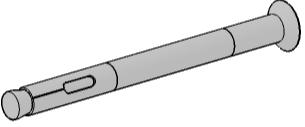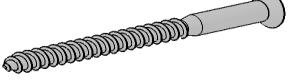  MP - multipurpose	  SS - steel stud	  SW - steel and wood stud	  WS - wood stud straps
  BT Bolts - 3/8" expansion bolts (5" or 6")	  BT Lags - 4" lag screws		